


INSTRUCTIONS FOR OPENING AND INSERTING REFILL CONTAINERS

The close-up cap of your **SOAPTRONIC**[®] solution containers is designed to eliminate contamination. It allows for safe shipping and guarantees sterility when arriving from the factory.

Please follow these instructions carefully when inserting new containers into your **GERMCONTROL**[™] touchless sanitation system.

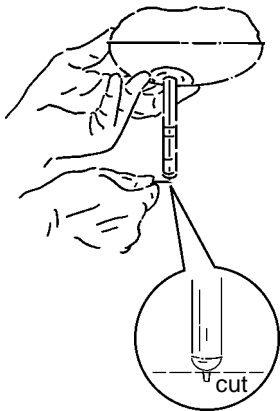

1. **The bottle is not designed to be carried, lifted, or picked up by its nozzle.** Therefore, handle the bottle by only touching the bag containing the liquid solution.
2. Before inserting a new bottle into the dispenser **cut off the plastic appendix at the tip** of the bottle by using a knife or sharp utensil (cut location is indicated at left). Cut while holding the container in an upright position (appendix pointing down) to prevent spilling of solution.
3. Insert the container and push it down until the base of the bag makes contact with the dispenser.
4. The dispenser is now ready for use.

soaptronic, LLC
26834 Vista Terrace
Lake Forest, CA 92630

Toll Free (800) 327-2606
Telephone (949) 465-8955
Telefax (949) 465-8962